

GHIK[®]
WWW.GHKAIRSOFT.COM

GS
Series

 


WARNING!


警告

- 請務必戴上護目鏡等護眼用具
- 請勿射擊人或動物
- 隨意用BB槍開玩笑可能會觸及法律
- 嚴禁望向槍口
- 請將槍口常向安全的地方
- 射擊時無論遠近，隨時確認射擊區內是否有行人或車輛經過
- 避免任意不經意地扣處扳機
- 除非完成射擊準備，否則切勿將手指放入扳機
- 不用或搬運時，請務必放置於槍盒等容器內
- 請存放在兒童拿不到的地方
- 禁止擅自改造或加強槍枝結構
- 非射擊時請將選擇鈕切換到保險位置
- 未成年兒童請由家長陪同下使用
- Always wear eye protective gear.
- Never aim or shoot a person or animal as the target.
- You may be punished if you are shooting for a practical joke.
- Never look into the gun muzzle.
- Always direct the muzzle towards a safe direction.
- Never shoot the air gun at places where people and cars pass cross.
- Avoid pulling the trigger carelessly.
- Please put away your fingers from the trigger, except when you are ready to shoot a target.
- Always put the gun in a case or bag when you are carrying it.
- Store the gun at places out of reach by children.
- Adult supervision is required for any person under the age of 18.

- 展開槍托請先下壓。
Please press down before unfolding.

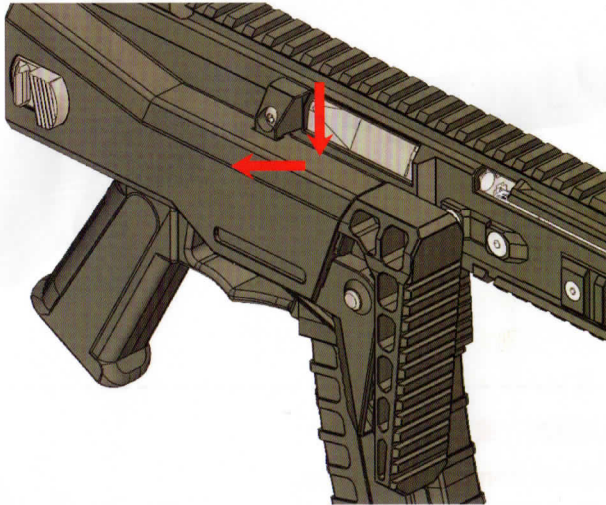

 
- 拆解槍管組，先將準星豎起。
Erect front sight before disassembling barrel assembly.
- 組合時注意螺絲長度, 位置。
Note the length and position of screws in combination.

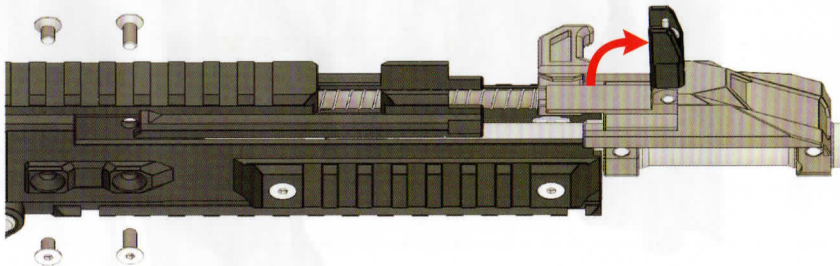

M4後托轉換座組裝圖 (M4 Assemble stock part)

1. 將M4後托轉接座和AEG後托桿依下圖組裝

 Please assemble M4 stock adapter and AEG prop rod as the picture.

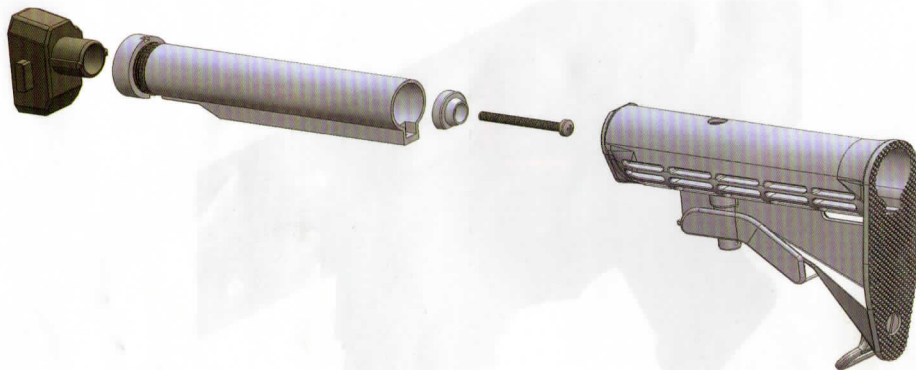


2. 將固定軸由下向上退出，並將後托取下。

Pull out the fixed pivot from the bottom up, and remove original stock.

3. 將組裝好的M4後托轉接座裝入，


並將固定軸由上向下裝入。

 Install assembled M4 stock adapter by inserting fixed pivot from the top.

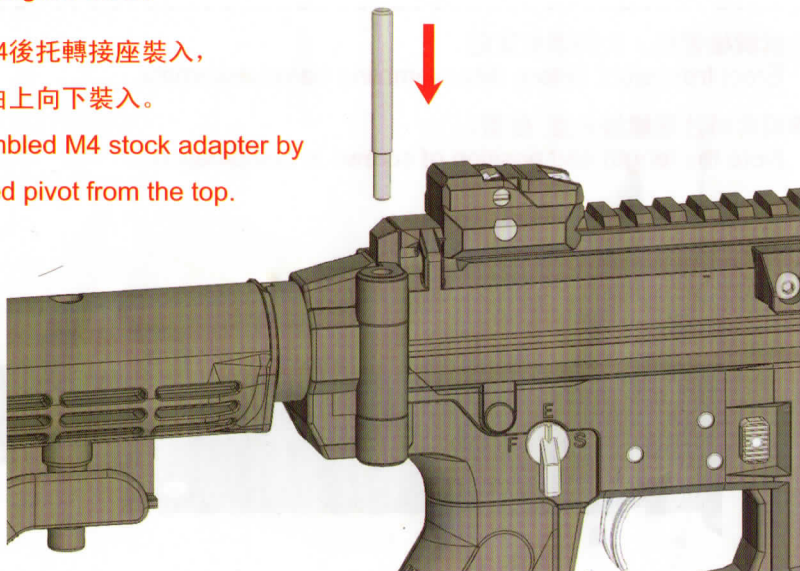


彈匣操作說明 Magazine operation Instruction

 - 填彈器與彈匣保持平行填彈。
Keep parallel angle between loader and magazine when filling bbs.

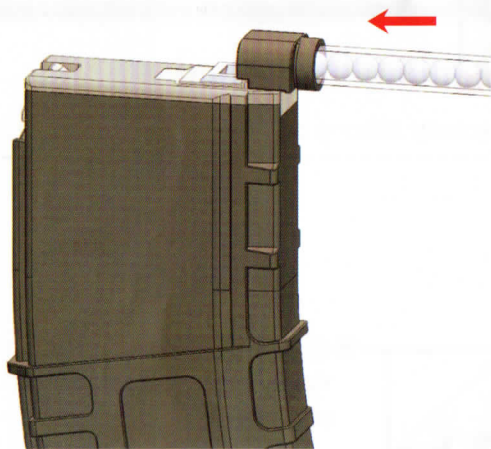

 - 禁止由上方填彈，請使用原廠專用填彈頭。
Forbid filling bbs from the top, Please be sure to use original loader tip.

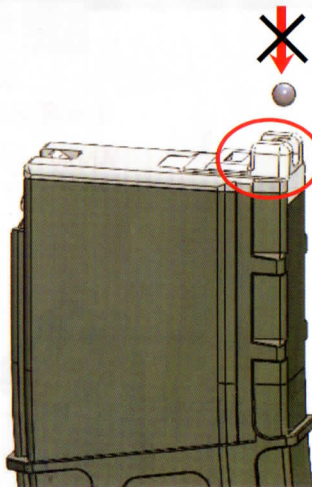


- 此區請勿撞擊。
Do not strike this part.

- 取消後定
Cancel bolt lock function.


直接將後定取出即可。
Take out stopper directly.



 - 保養時孔內請上高濃度矽膏或黃油。
Maintenance inside the hole with high concentration of silicon cream or lubricating grease.

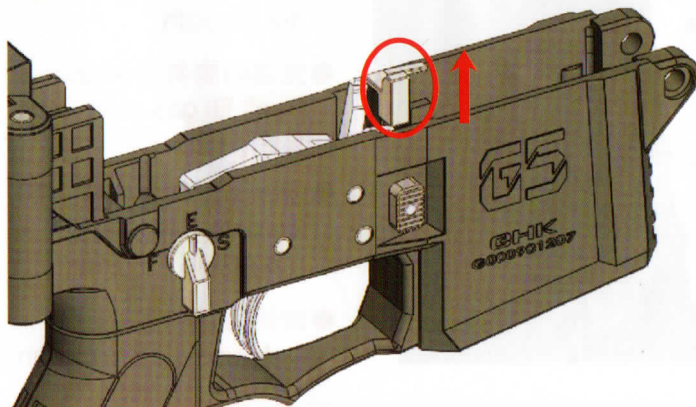

各部零件保養 (Maintenance for all parts)

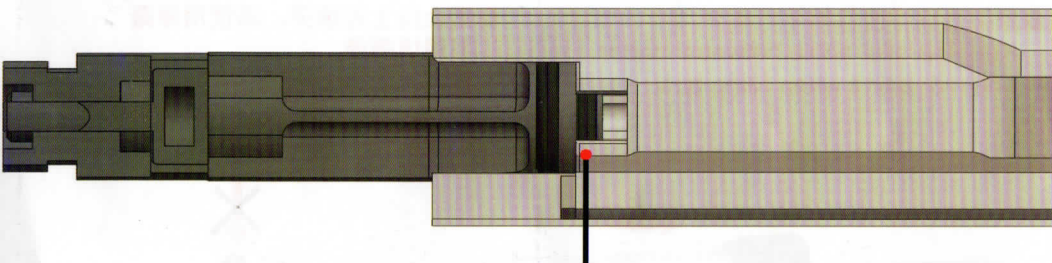 

塗抹高濃度矽油

Apply high viscosity silicone oil.

- 請使用0.2克以上重量，電槍規格之BB彈。
Please use BBs for AEG's specification, the weight need to more than 0.2g

- 裝填BB彈請勿超過38發。
Don't fill in BBs over 38 rounds.

- 長期不使用請勿裝填BB彈。
Do not filling BBs if you won't play for a long time.

- 請勿放置超過40℃以上之高溫環境。
Don't place magazine at temperature above 40℃ environment.



- 塗抹高濃度矽油。
Apply high viscosity silicone oil.

- 瓦斯裝填過量，會導致全自動射擊不順暢。
If gas filled with excessive, will result in auto fire and not smooth.

 
- 充氣時間勿超過5秒。
Don't fill gas over 5 seconds.

- 隨時彈匣內要保有瓦斯。
Remain gas in the magazine anytime.

- 請使用12KG瓦斯。
Only use 12 KG Green gas.


●紅圈處用針車油保養


Apply household oil in the area circle in red.

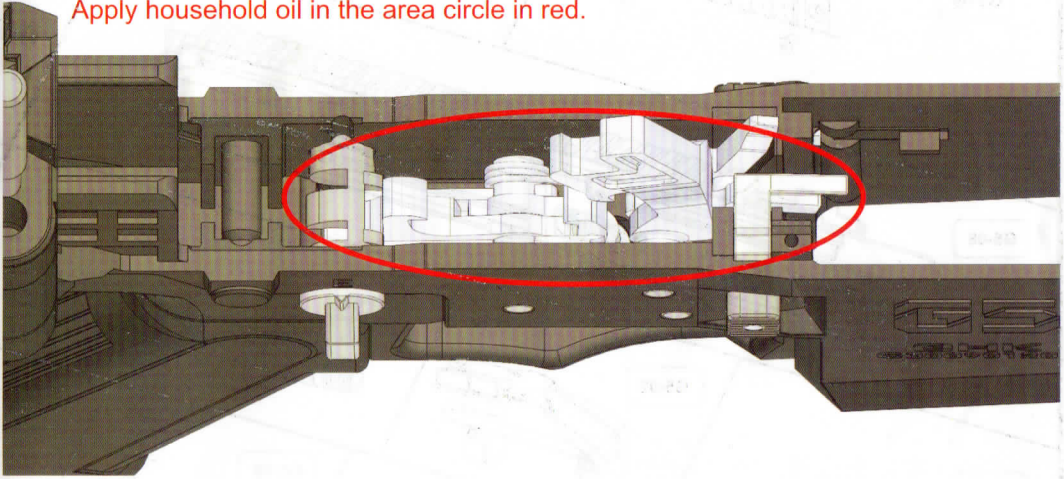


●HOP-UP調整位置

  Adjust the place of HOP-UP

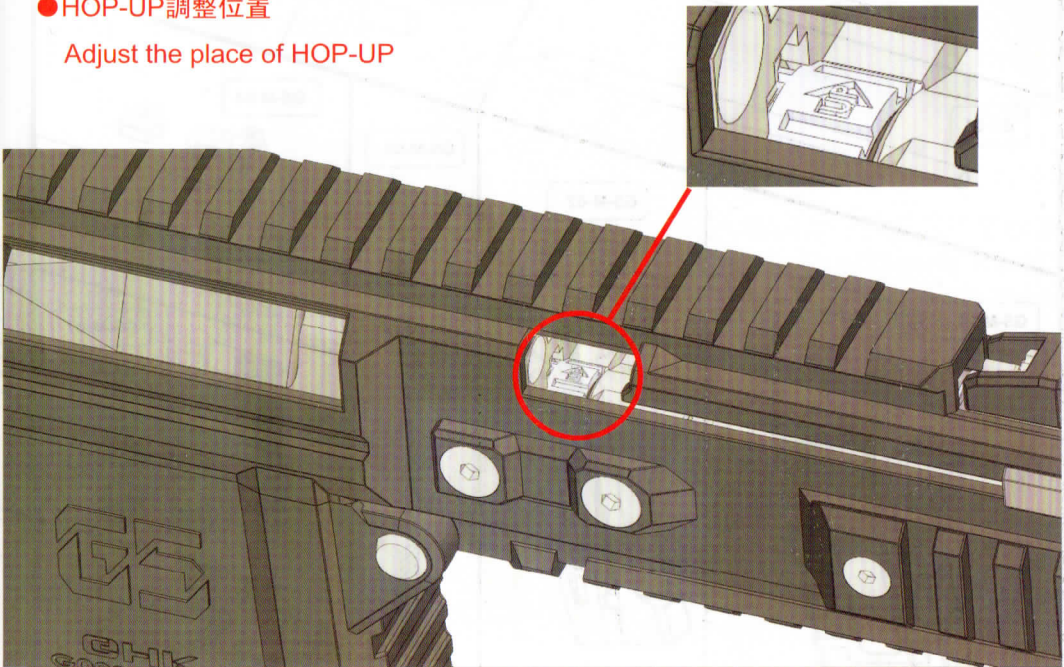

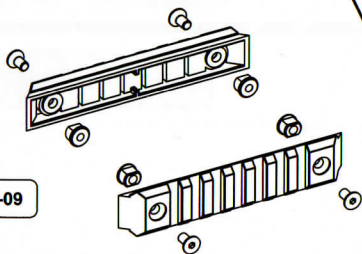

G5-10

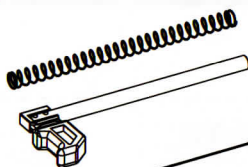 


G5-11




G5-12



 
G5-08

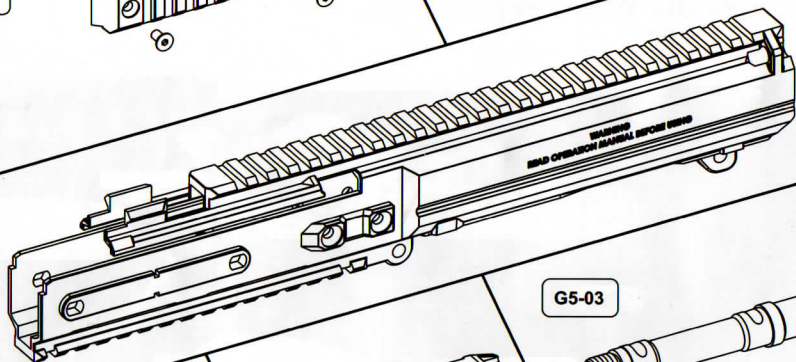

G5-03

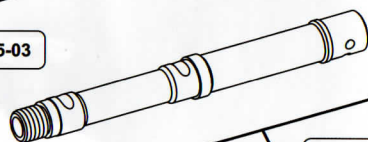 

G5-02

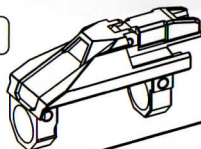 


G5-01



G5-07

 G5-06




G5-05




G5-04



 G5-M-02

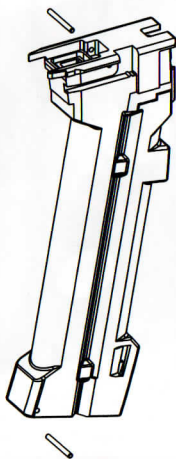

G5-M-01

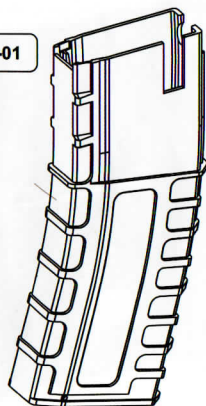 

G5-M-03



G5-M-04



G5-M-05



G5-M-07



G5-M-06



G5-M-08



G5-M-09

 





G5-27



G5-28

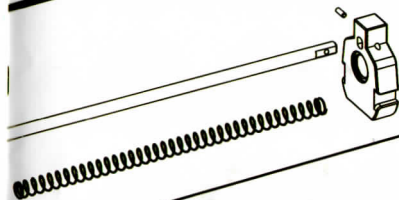



G5-14

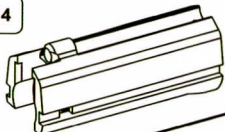 


G5-13



  
G5-15

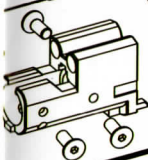

G5-16

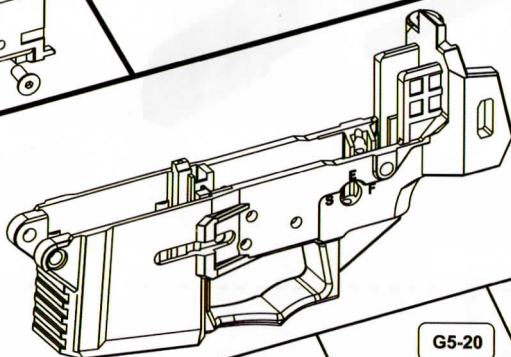 


G5-20

 

G5-21



 
G5-31

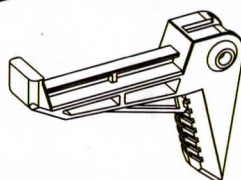


G5-18



 
G5-19




G5-26

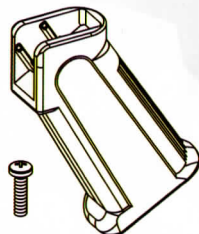 

G5-25

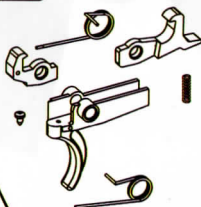 

G5-24


 



G5-23



   G5-22



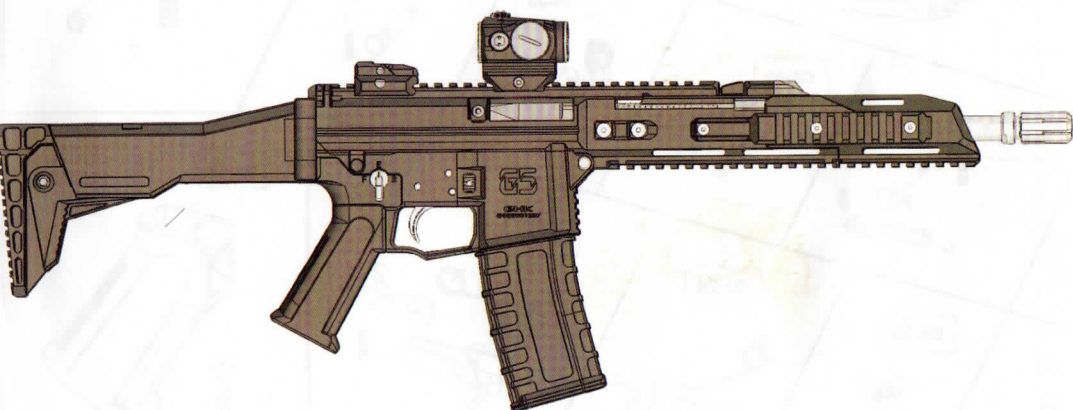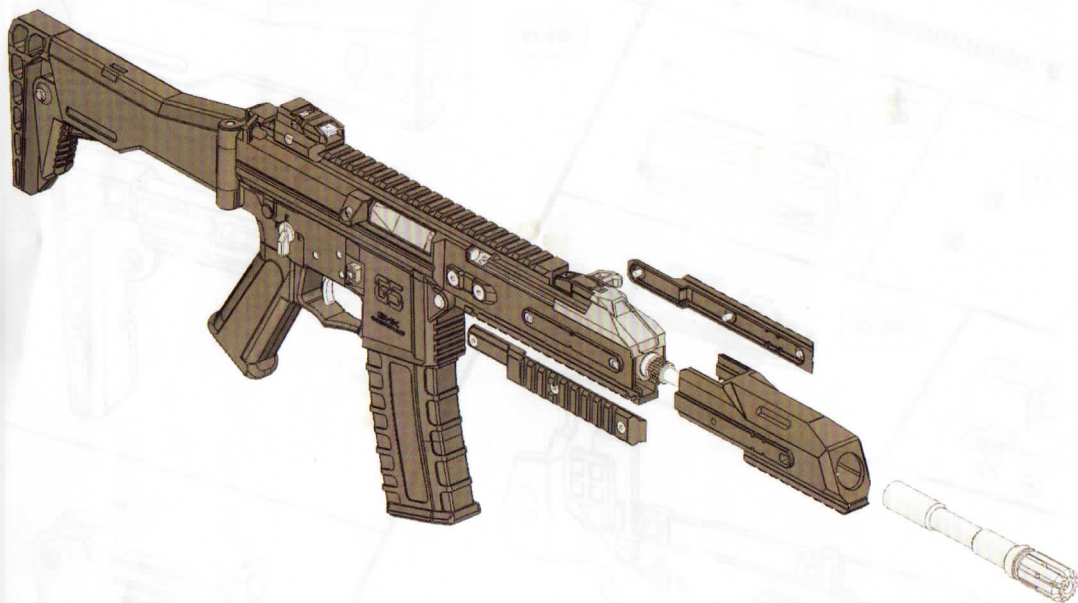

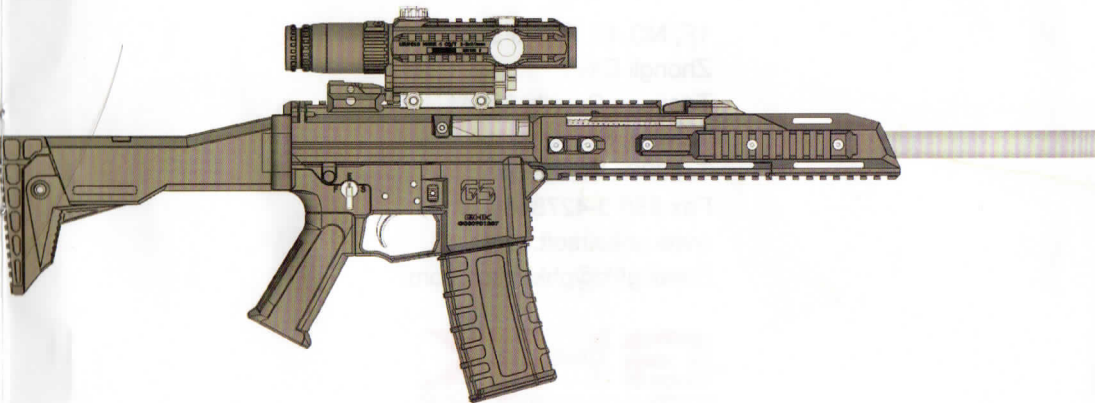

011-162

1F, NO.49, BO-AI 3 Rd,
Zhongli City,
Taoyuan County 32041,
Taiwan, R.O.C.
Tel:886-3-4278783
Fax:886-3-4278496
www.ghkairsoft.com
Email:ghk@ghkairsoft.com

GHK
WWW.GHKAIRSOFT.COM