

警告



GHK[®]
WWW.GHKAIRSOFT.COM

553 Series

No.19, Ln. 210, Gong 5th Rd.,
Longtan Dist,
Taoyuan City 32559,
Taiwan(R.O.C)
Tel:886-3-4707602
Fax:886-3-4708902
www.ghkairsoft.com
Email:ghk@ghkairsoft.com




WARNING!

警告


- 任何時候對待玩具槍應當默認為已上膛隨時可發射的狀態。
- 請務必戴上護目鏡等護眼用具。
- 請勿射擊人或動物。
- 隨意用BB槍開玩笑可能會觸及法律。
- 嚴禁望向槍口。
- 槍口必須朝向安全的地方。
- 射擊時無論遠近，隨時確認射擊區內是否有行人或車輛經過。
- 避免任意或不經意地觸動扳機。
- 除非完成射擊準備，否則切勿將手指放入扳機。
- 為安全起見，不使用時必須將HOP UP內的BB彈完全清除，並卸下彈匣。
- 不用或搬運時，請務必放置於槍盒等容器內。
- 請存放在兒童拿不到的地方。
- 禁止擅自改造或加強槍枝結構。
- 非射擊時請將選擇鈕切換到保險位置。
- 未成年兒童請由家長陪同下使用。
- User should treat airsoft toy gun seriously and recognize it as launch state at any time.
- Always wear eye protective gear.
- Never aim or shoot a person or animal as the target.
- You may be punished if you are shooting for a practical joke.
- Never look into the gun muzzle.
- Always direct the muzzle towards a safe direction.
- Never shoot the airsoft toy gun at places where people and cars pass by.
- Avoid pulling the trigger carelessly.
- Please put away your fingers from the trigger, except when you are ready to shoot a target.
- For safety, user must clean BBs from the HOP UP completely, and remove the magazine in the unused state.
- Always put the airsoft toy gun in a case or bag when you are carrying it or not using it.
- Store the gun at places out of reach by children.
- It is forbidden to remodel or strengthen the airsoft toy gun structure.
- Please switch the selector to the safe mode in unused state.
- Adult supervision is required for any person under the age of 18.

操作說明 (Instruction)

- 填彈器與彈匣保持平行填彈。
Keep parallel angle between loader and magazine.
- 裝填BB彈請勿超過32發。
Do not load bbs over 32 rounds.

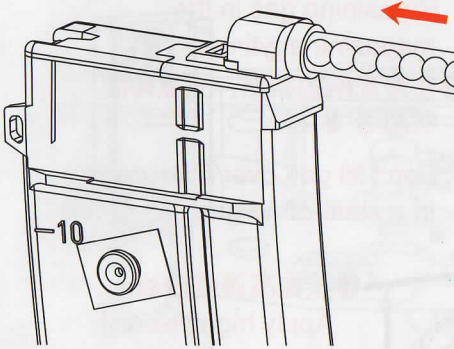


- 禁止由上方填彈，請使用原廠專用填彈頭。
Prohibit reloading directly above.
Be sure to use original loader tip.

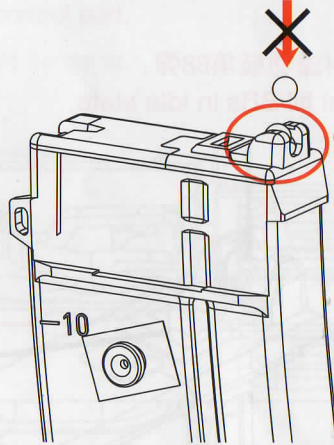

- 此區請勿撞擊。
Do not strike this area.

- HOP-UP調整位置
HOP-UP Adjustment.

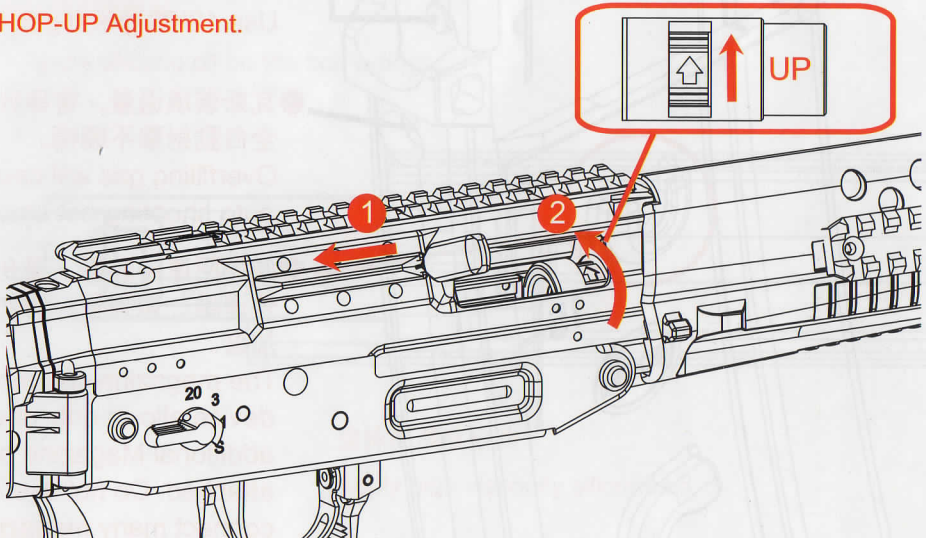

各部位零件保養

(Maintenance for inner parts.)

- 請使用0.25克以上重量，電槍規格之BB彈。

Please use bbs weight above 0.25g, for AEG's specification.

- 不使用請勿裝填BB彈。

Do not fill BBs in idle state.

- 請勿放置超過40°C以上之高溫環境。

Do not place magazine at environmental temperature above 40 degrees Celsius.

- 隨時彈匣內要保有瓦斯。

Remaining gas in the magazine anytime.

- 在沒瓦斯的狀態，充氣時間勿超過 5 秒。

Don't fill gas over 5 seconds in a state of no gas.

- 塗抹高濃度矽油。

Apply high viscosity silicone oil.

- 請使用12KG瓦斯。


Use 12KG green gas only.

- 瓦斯裝填過量，會導致全自動射擊不順暢。

Overfilling gas will cause auto shooting not smooth.

- 此彈匣連接裝置，僅允許額外連結一個彈匣，切勿過度加裝。

The magazine connection device allows only one additional Magazine being attached. Do not use it to connect many magazines at the same time.

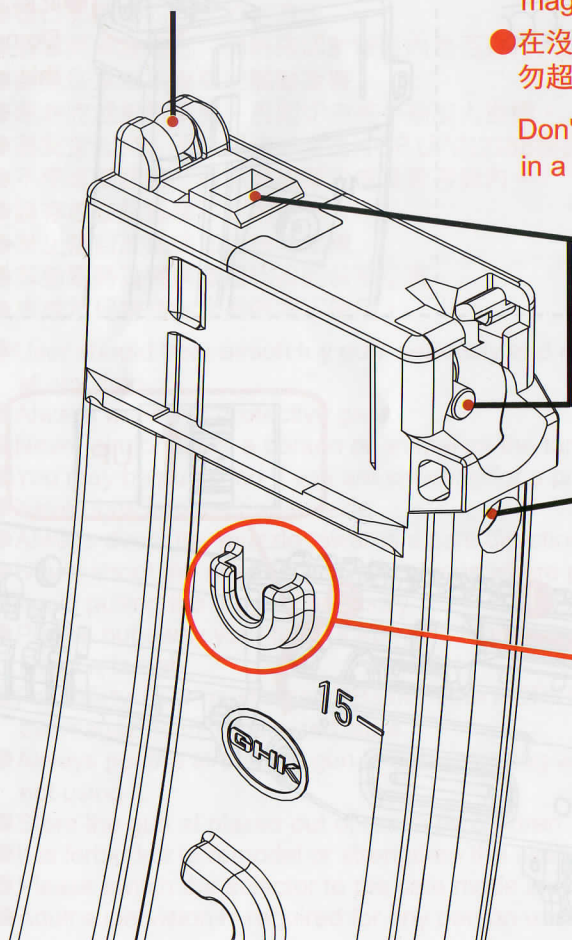


●紅圈處用針車油保養

Apply machine oil in the red circle part.

●火控內部請勿任意拆解, 變更, 並請注意是否有異物進入


Do not disassemble or change the fire control part.

Please be careful not to let any irrelevant things in.

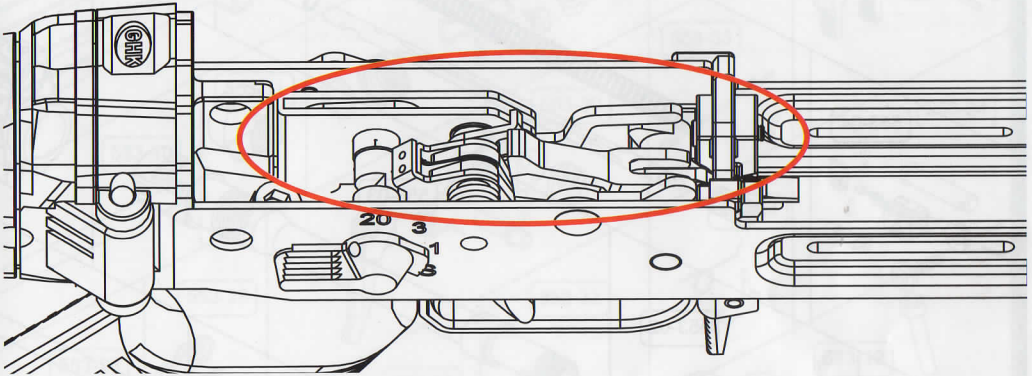


●槍機O環保養

Apply silicone oil on the bolt o-rings.

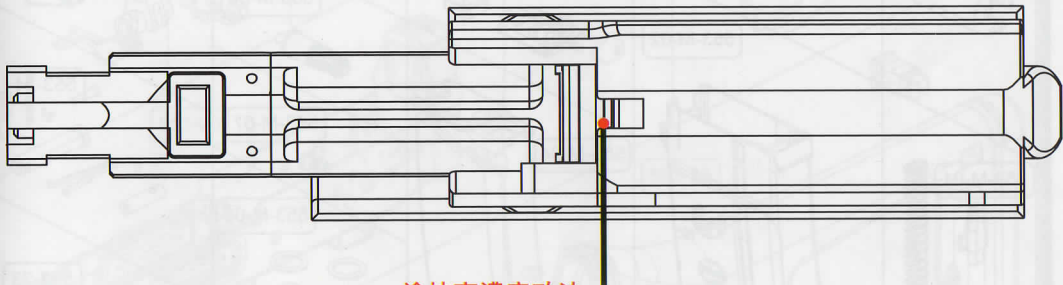

塗抹高濃度矽油

Apply high viscosity silicone oil.

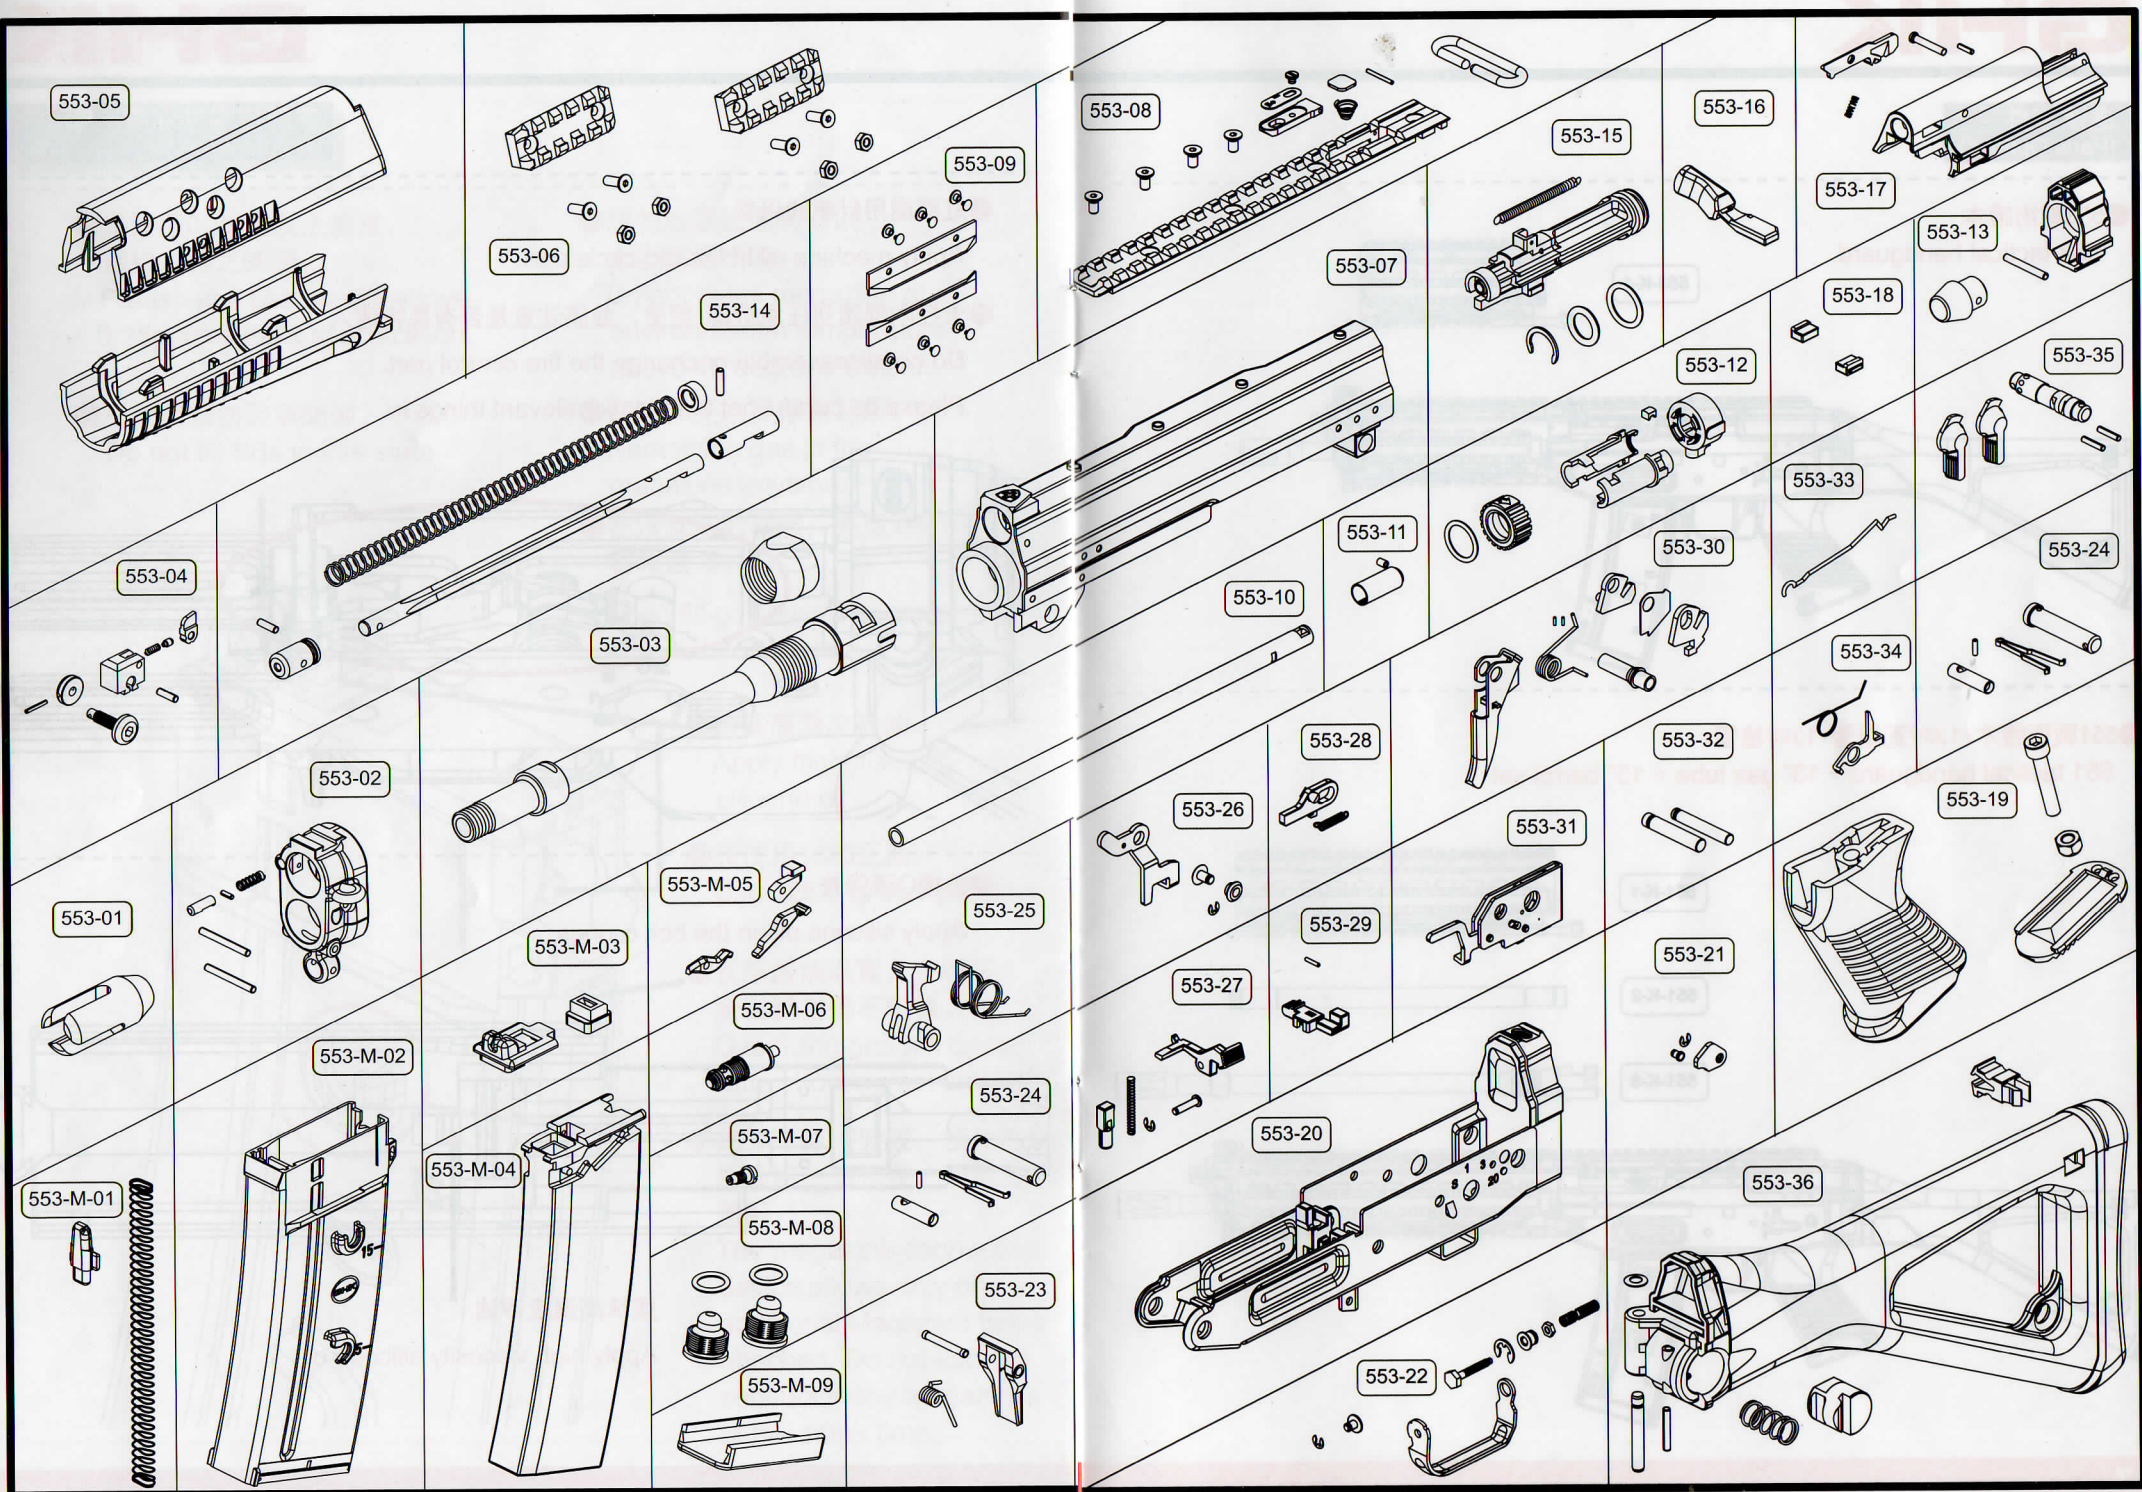


選購零件 (Parts Options)

●553戰術護木

553 tactical handguard.

553-K-1

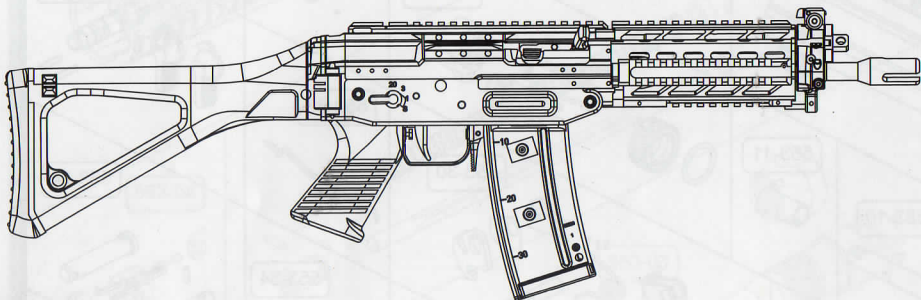

●551戰術護木+13吋瓦斯管+13吋槍管

551 tactical handguard + 13" gas tube + 13" barrel set.

551-K-1



551-K-2



551-K-3

