# WARNING: BEFORE USAGE, THE INSTRUCTION MUSE BE READ.

THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.



DO NOT POINT AT PEOPLE OR ANIMAL.



PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING





GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40  $^\circ C$ 



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm<sup>°</sup>



BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOOK THROUGH THE BARREL



DO NOT LOAD ANYTHING BUT BB BULLETS.



PLEASE SHOOT IN SAFE PLACE


## OPERATION

#### **1.REMOVE THE MAGAZINE**



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2.FILLING GAS

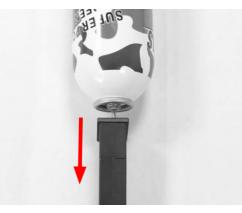

FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICA DIRECTION.


#### 3.LOAD BB BULLETS



**4.INSERT MAGAZINE** 



5.LOAD

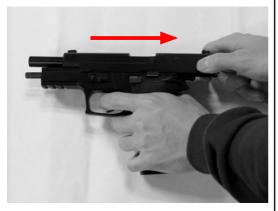

PULL THE SLIDE COMPLETELY TO THE REAR.

6.FIRE



PULL THE TRIGGER.

#### **8.DECOCKING HAMMER**




TRESS THE DECOUNTING LEVER TO DECOUR HAIVINER WHEN YOU ARE NOT SHOOTING.

DISASSEMBLY 1.REMOVE MAGAZINE AND SLIDE



REMOVE MAGAZINE AND ROTATE THE TAKEDOWN LEVER CLOCKWISE UNTIL IT STOPS AND REMOVE THE SLIDE. 2.REMOVE THE RECOIL GUIDE

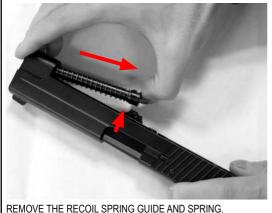

**3.REMOVE THE BARREL** 


### ASSEMBLY REVERSE THE DISASSEMBLY ORDER


## ADJUST TREJECTORY

TWIST THE ADJUST DIAL TO ADJUST TEAJECTORY.



PLEASE ADJUST ACCORDING TO

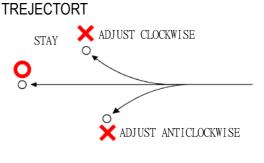

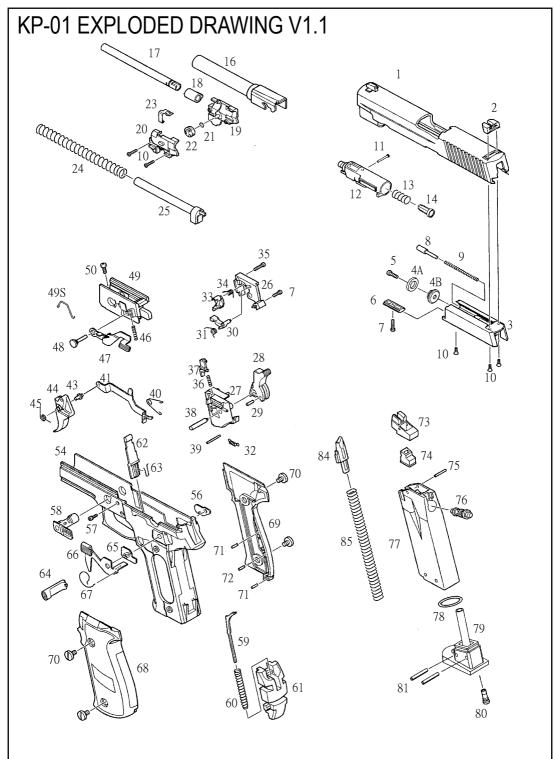

NO.	NAME	PRICE	NO.	NAME	PRICE
1	SLIDE	1600	44	TRIGGER	120
2	REAR SIGHT	100	45	TRIGGER SPRING	30
3	PISTON	400	46	SLIDE STOP SPRING	20
4A	PISTON CAP	20	47	SLIDE STOP	100
4B	PISTON CAP BASE	40	48	TRIGGER SHAFT	50
5	PISTON SCREW	10	49	FRONT CHASIS	250
6	PISTON PARTS	30	49S	TAKE DOWN SPRING	20
7	PISTON PARTS SCREW	10	50	SCREW	10
8	RETURN PLUNGER	30	54	FRAME	2000
9	CYLINDER RETURN SPRING	20	55	SCREW	10
10	SCREW	10	56	MAGAZINE OBTAINING COVER	30
11	CYLINDER PIN	10	57	SCREW	10
12	CYLINDER	150	58	TAKEDOWN LEVER	100
13	CYLINDER VALVE SPRING	20	59	HAMMER STRAT	50
14	CYLINDER VALVE	20	60	HAMMER SPRING	50
16	OUTTER BARREL	600	61	HAMMER SPRING HOUSE	60
17	INNER BARREL	150	62	MAGAZINE OBTAINING STOPPER	50
18	RUBBER CHAMBER	80	63	MAGAZINE OBTAINING SPRING	10
19	CHAMBER COVER(RIGHT)	120	64	MAGAZINE OBTAINING	100
20	CHAMBER COVER(LEFT)	120	65	DECOCKING LEVER BEARING	40
21	O RING	10	66	DECOCKING LEVER	120
22	ADJUST DIAL	20	67	DECOCKING SPRING	20
23	ADJUST LEVER	50	68	GRIP (LEFT)	100
24	RECOIL SPRING	60	69	GRIP (RIGHT)	100
25	RECOIL SPRING GUIDE	120	70	GRIP SCREW	25
26	REAR CHASSIS (RIGHT)	120	71	SPRING PIN	10
27	REAR CHASSIS (LEFT)	140	72	SPRING PIN	10
28	HAMMER	150	73	BB LIP	60
29	HAMMER PIN	10	74	MAGAZINE GASKET	60
30	KNOCKER	40	75	BB LIP PIN	10
31	KNOCKER SPRING	30	76	VALVE	120
32	KNOCKER RETURN SPRING	30	77	MAGAZINE CASE	400
33	SEAR	60	78	O RING	20
34	SEAR SPRING	30	79	MAGAZINE BASE	180
35	SCREW	10	80	FILLING VALVE	50
36	KNOCKER LOCK SPRING	20	81	MAGAZINE BASE PIN	10
37	KNOCKER LOCK	50	84	FOLLOWER	30
38	HAMMER PIN	30	85	FOLLOWER SPRING	50
39	REAR CHASSIS	20			
40	TRIGGER BAR SPRING	20			
41	TRIGGER BAR	120			
42	SAFETY BAR	50			
43	TRIGGER BAR SHAFT	30			1

## KP-01 MANUAL

V1.

# KJWORKS